

Brecknell Weight Display Indicator

Product Images



Description

SAFETY DIRECT

The Brecknell Weight Display Indicator is designed to work alongside the Brecknell Pallet Scale. The Weight Display Indicator features a RS 232 interface

- Used with Brecknell Pallet Scale (sold separately)
- Interface allows connection to printer for enabling the user to piece count and custom unit weights if required